

EFRY

Elev 407'/124m

N60 44.7
E024 06.5

15 NM ESE Forssa


(Radio)

RÄYSKÄLÄ RADIO 122.650

ATIS 122.625 (Automatic weather observation information only)

RWY	ILS	RWY	ILS

SCALE 1:200 000

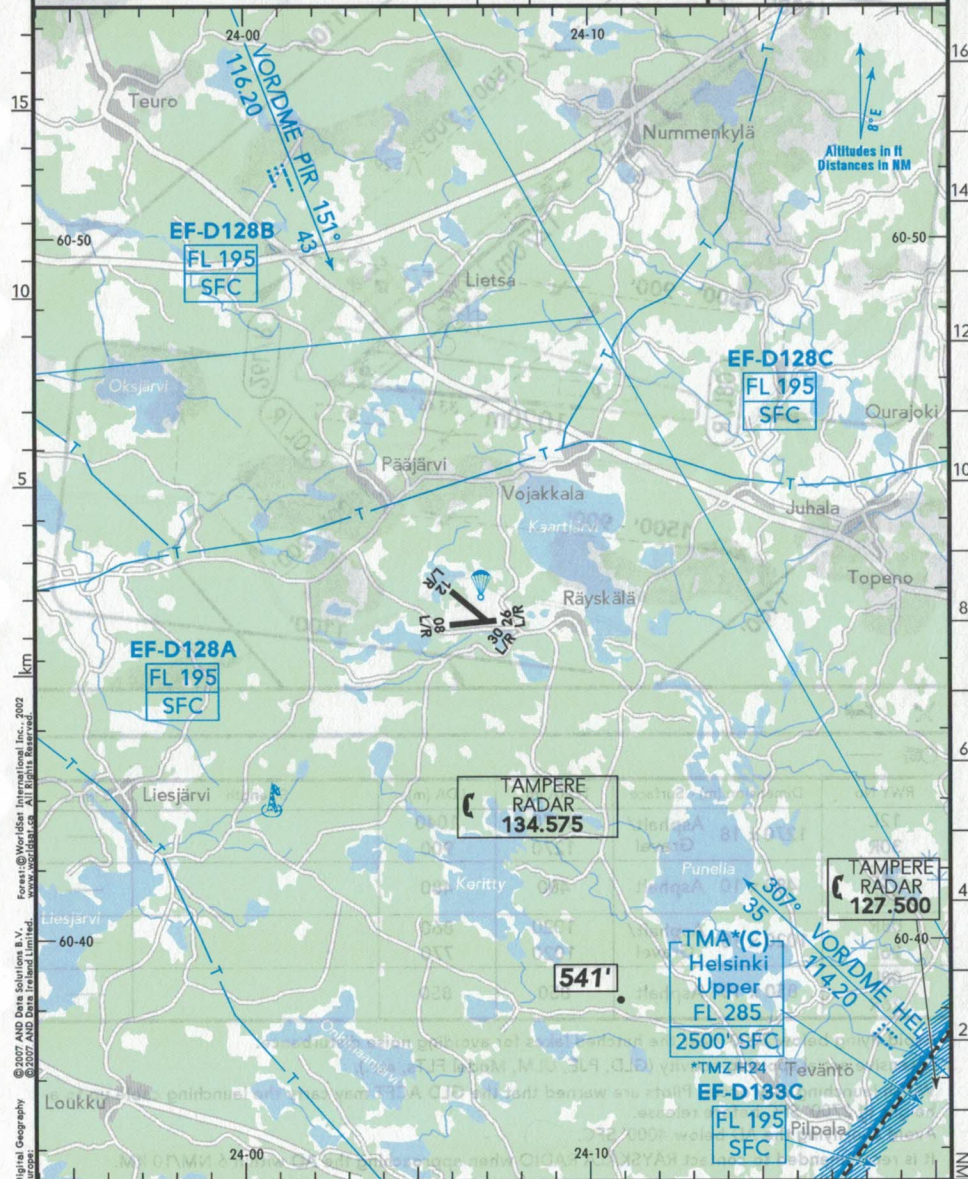

EFRO

Elev 643'/196m

N66 33.7
E025 49.9

4.4 NM NE Rovaniemi

(APP)

ROVANIEMI ARRIVAL 118.600 119.700 (fi, en)

ROVANIEMI RADAR 129.900 119.700 (fi, en)

(TWR)

ROVANIEMI TOWER 118.700 119.700 (fi, en)


ATIS 117.700

*ILS/DME freq paired.

RWY	ILS	RWY	ILS
		21*	111.70 RO 206°


SCALE 1:300 000

210-79

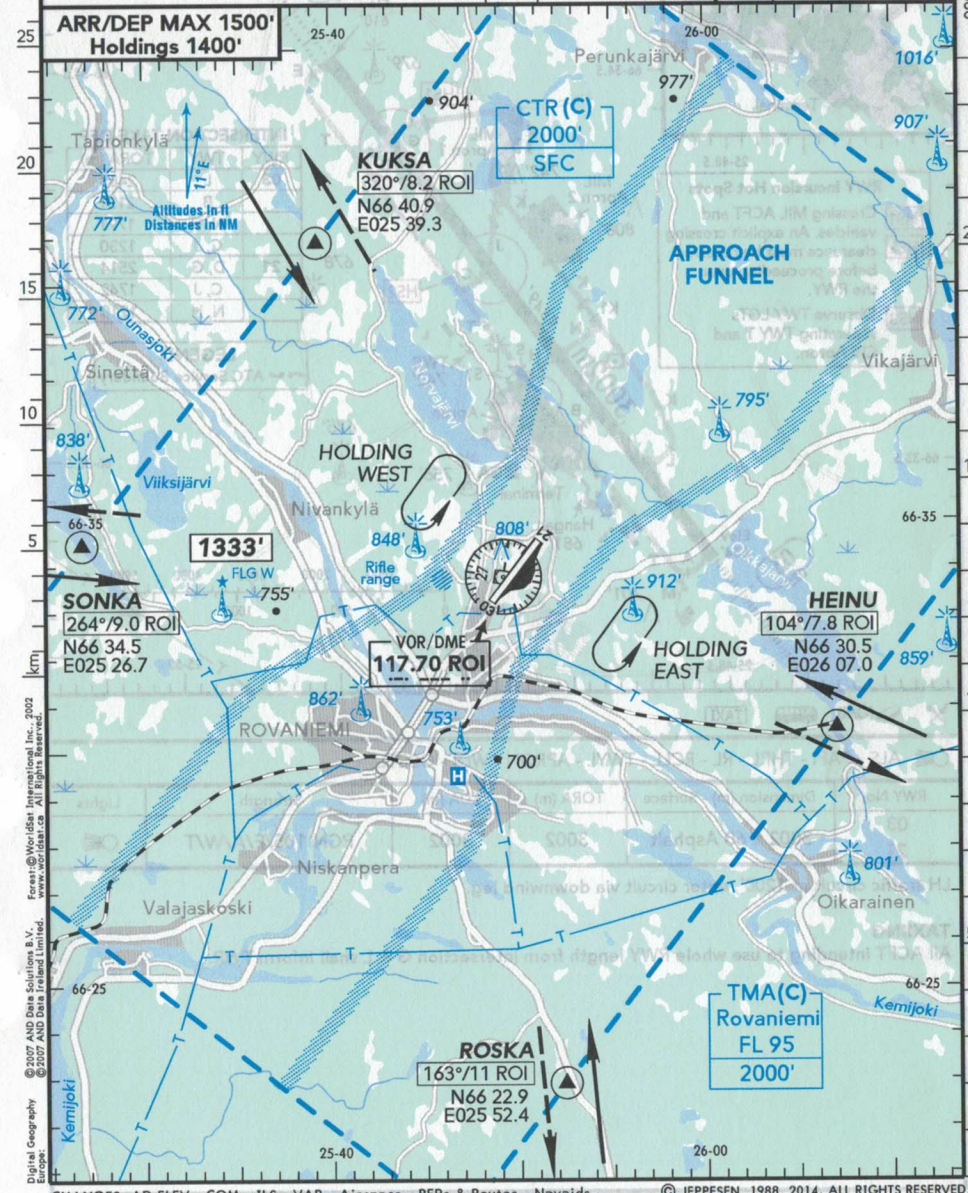

ROVANIEMI ROVANIEMI FINLAND

ATIS **117.700**

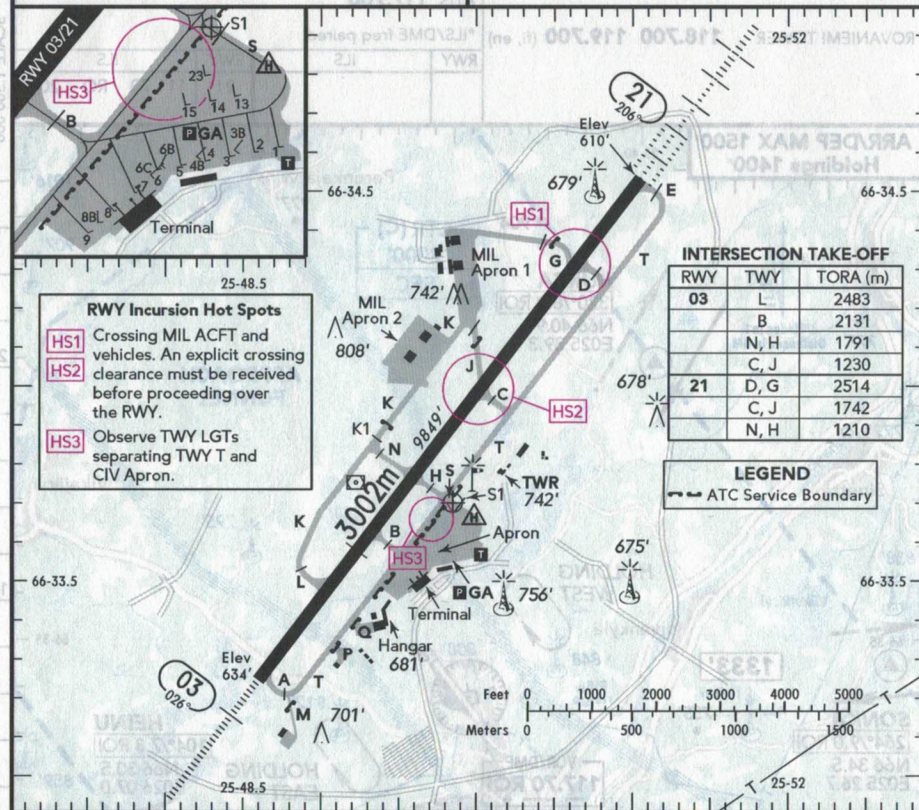

✂ (O/R) TAXI

ALS - PAPI - THRL - RL - RCLL - TWYL - APRON - WDI - OBSTL.

RWY No	Dimension (m) - Surface	TORA (m)	LDA (m)	Strength	Lights
03 21	3002 x 60 Asphalt	3002	3002	PCN 105/F/A/W/T	—

LH traffic circuit at 1200', enter circuit via downwind leg.

TAXIING

All ACFT intending to use whole RWY length from intersection G & L shall inform TWR.




CHANGES: COM - OEL - Parking Stands - TWR ELEV - OBST - AD Facilities

© JEPPESEN, 2002, 2014. ALL RIGHTS RESERVED.

RÄYSKÄLÄ RÄYSKÄLÄ FINLAND

ATIS **122.625** (Automatic weather observation information only)

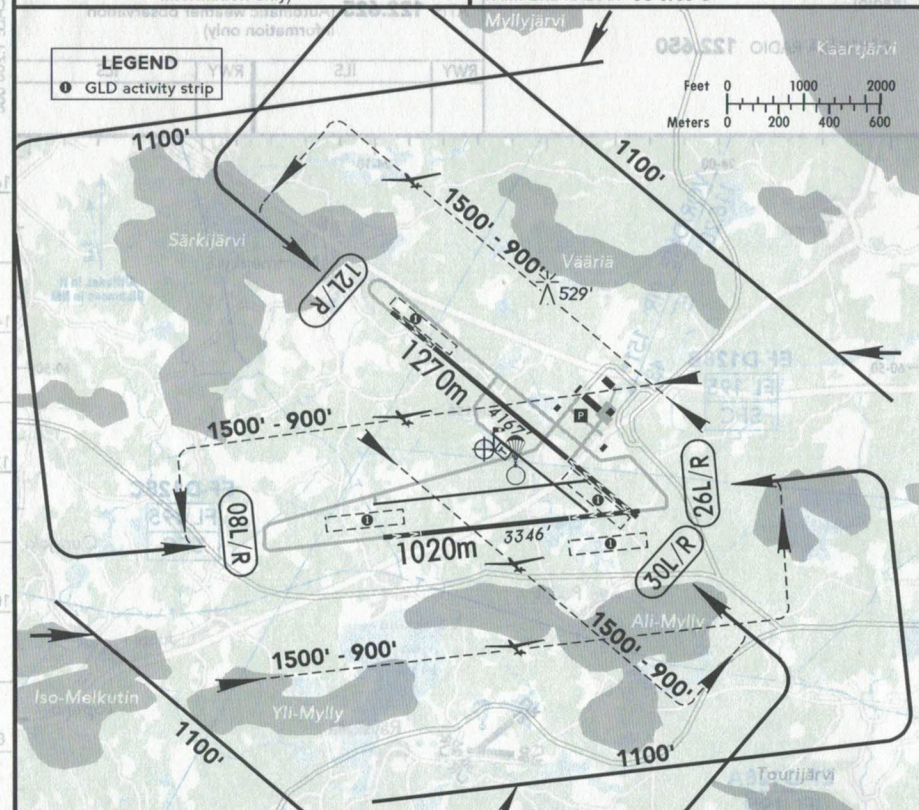

✂

ALS - PAPI - THRL - RL - RCLL - TWYL - APRON - WDI - OBSTL.

RWY No	Dimension (m) - Surface	TORA (m)	LDA (m)	Strength	Lights
12L 30R	1270 x 18 Asphalt/Gravel	1270 1270	1040 900	—	—
12R 30L	480 x 10 Asphalt	480	480	—	—
08R 26L	1020 x 18 Asphalt/Gravel	1020 1020	860 770	—	—
08L 26R	850 x 10 Asphalt	850	850	—	—

Avoid flying below 2000' near the hatched lakes for avoiding noise disturbance.

Extensive aerial sporting activity (GLD, PJE, ULM, Model FLTs, etc.).

Winch launching may occur. Pilots are warned that the GLD ACFT may carry the launching cable up to a height of 2700' SFC before release.

Avoid overflying the AD below 4000' SFC.

It is recommended to contact RÄYSKÄLÄ RADIO when approaching the AD within 6 NM/10 KM.

CHANGES: COM - Traffic Circuit - Text

© JEPPESEN, 2004, 2015. ALL RIGHTS RESERVED.